



RUBBER CONE SPRING UNIT - REAR

Remove and refit 68.30.64

Strut and joint, 1 to 5 and 7 68.30.68

Removing

1. Slacken the road wheel nuts, jack-up and support the rear of the vehicle - one side. Remove the road wheel.
2. Remove the hydraulic damper, see 68.15.22/23.
3. Remove the radius arm, see 68.35.02.
4. Pull the strut from the spring unit and knuckle joint assembly.
5. Drive the knuckle joint from the strut.
6. Release the rubber cone from its location in the sub-frame.

Refitting

7. Reverse the procedure in 1 to 6, noting:
 - a Assemble the knuckle joint, lubricate with Dextragrease GP and locate into the radius arm.
 - b Ensure that the strut and knuckle joint are engaged as the radius arm is raised to fit the damper.