




9.17C Locking nut separated from jet bearing

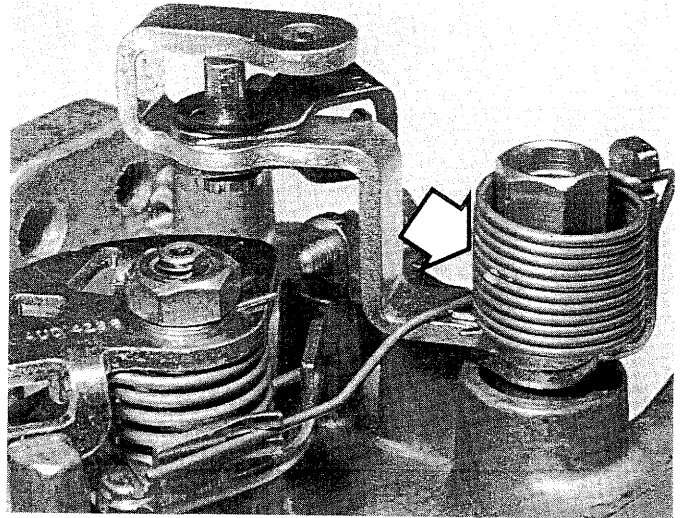


9.19A Throttle return spring (arrowed)

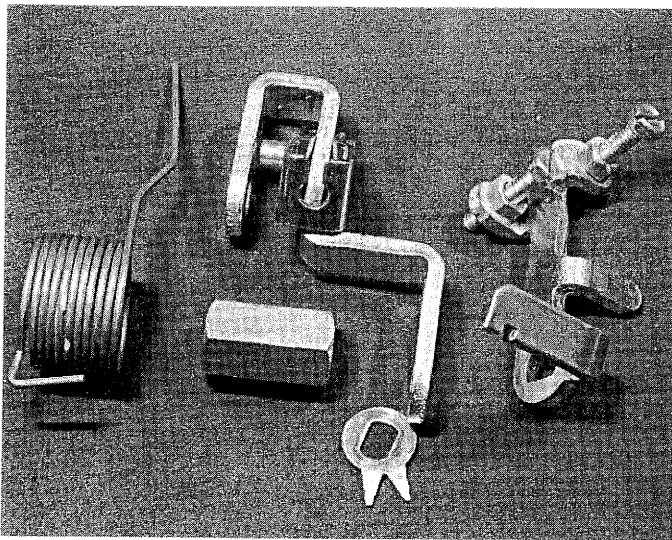


9.19B Throttle lever components

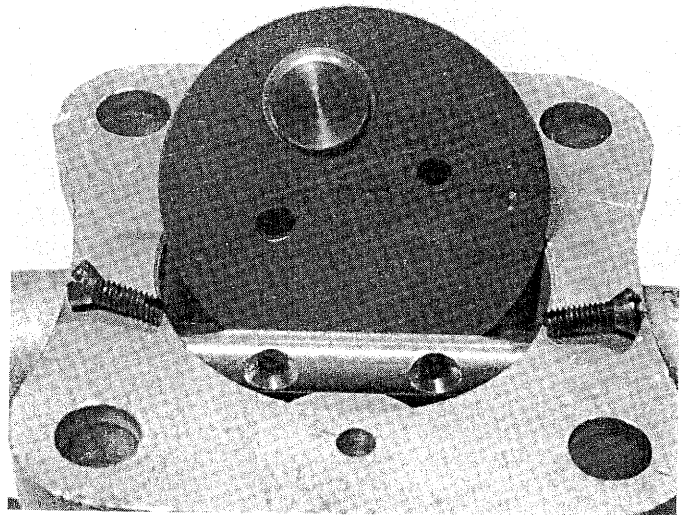

9.20 Throttle disc removal

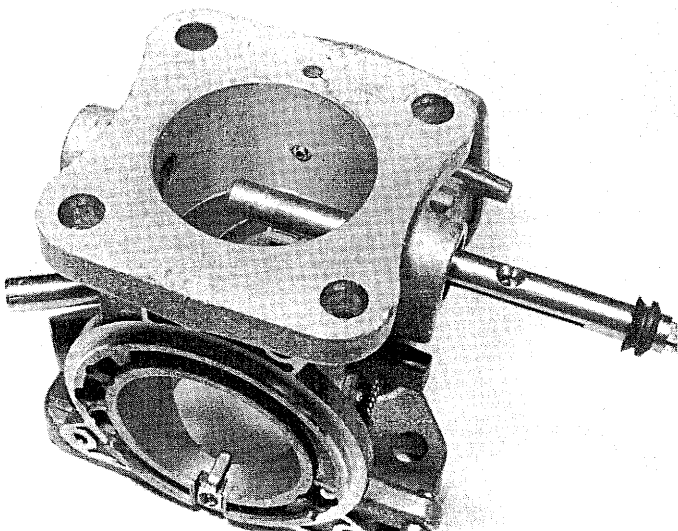

9.21A Removing the throttle spindle

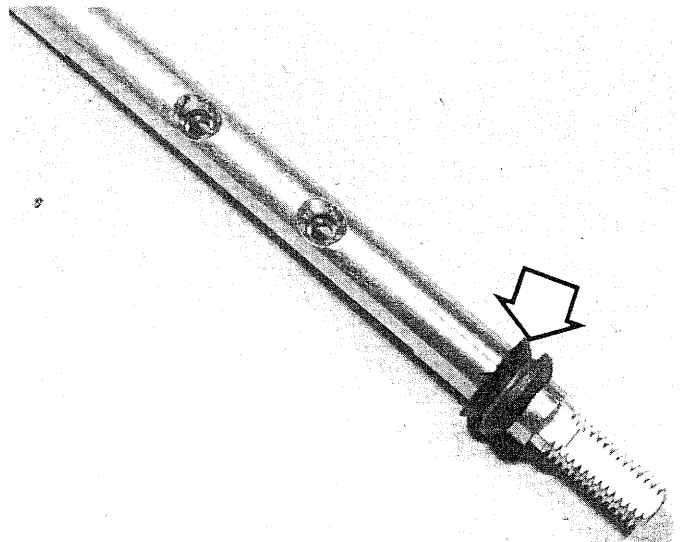

9.21B Throttle spindle and seal (arrowed)