
 


Exterior lamps and horn

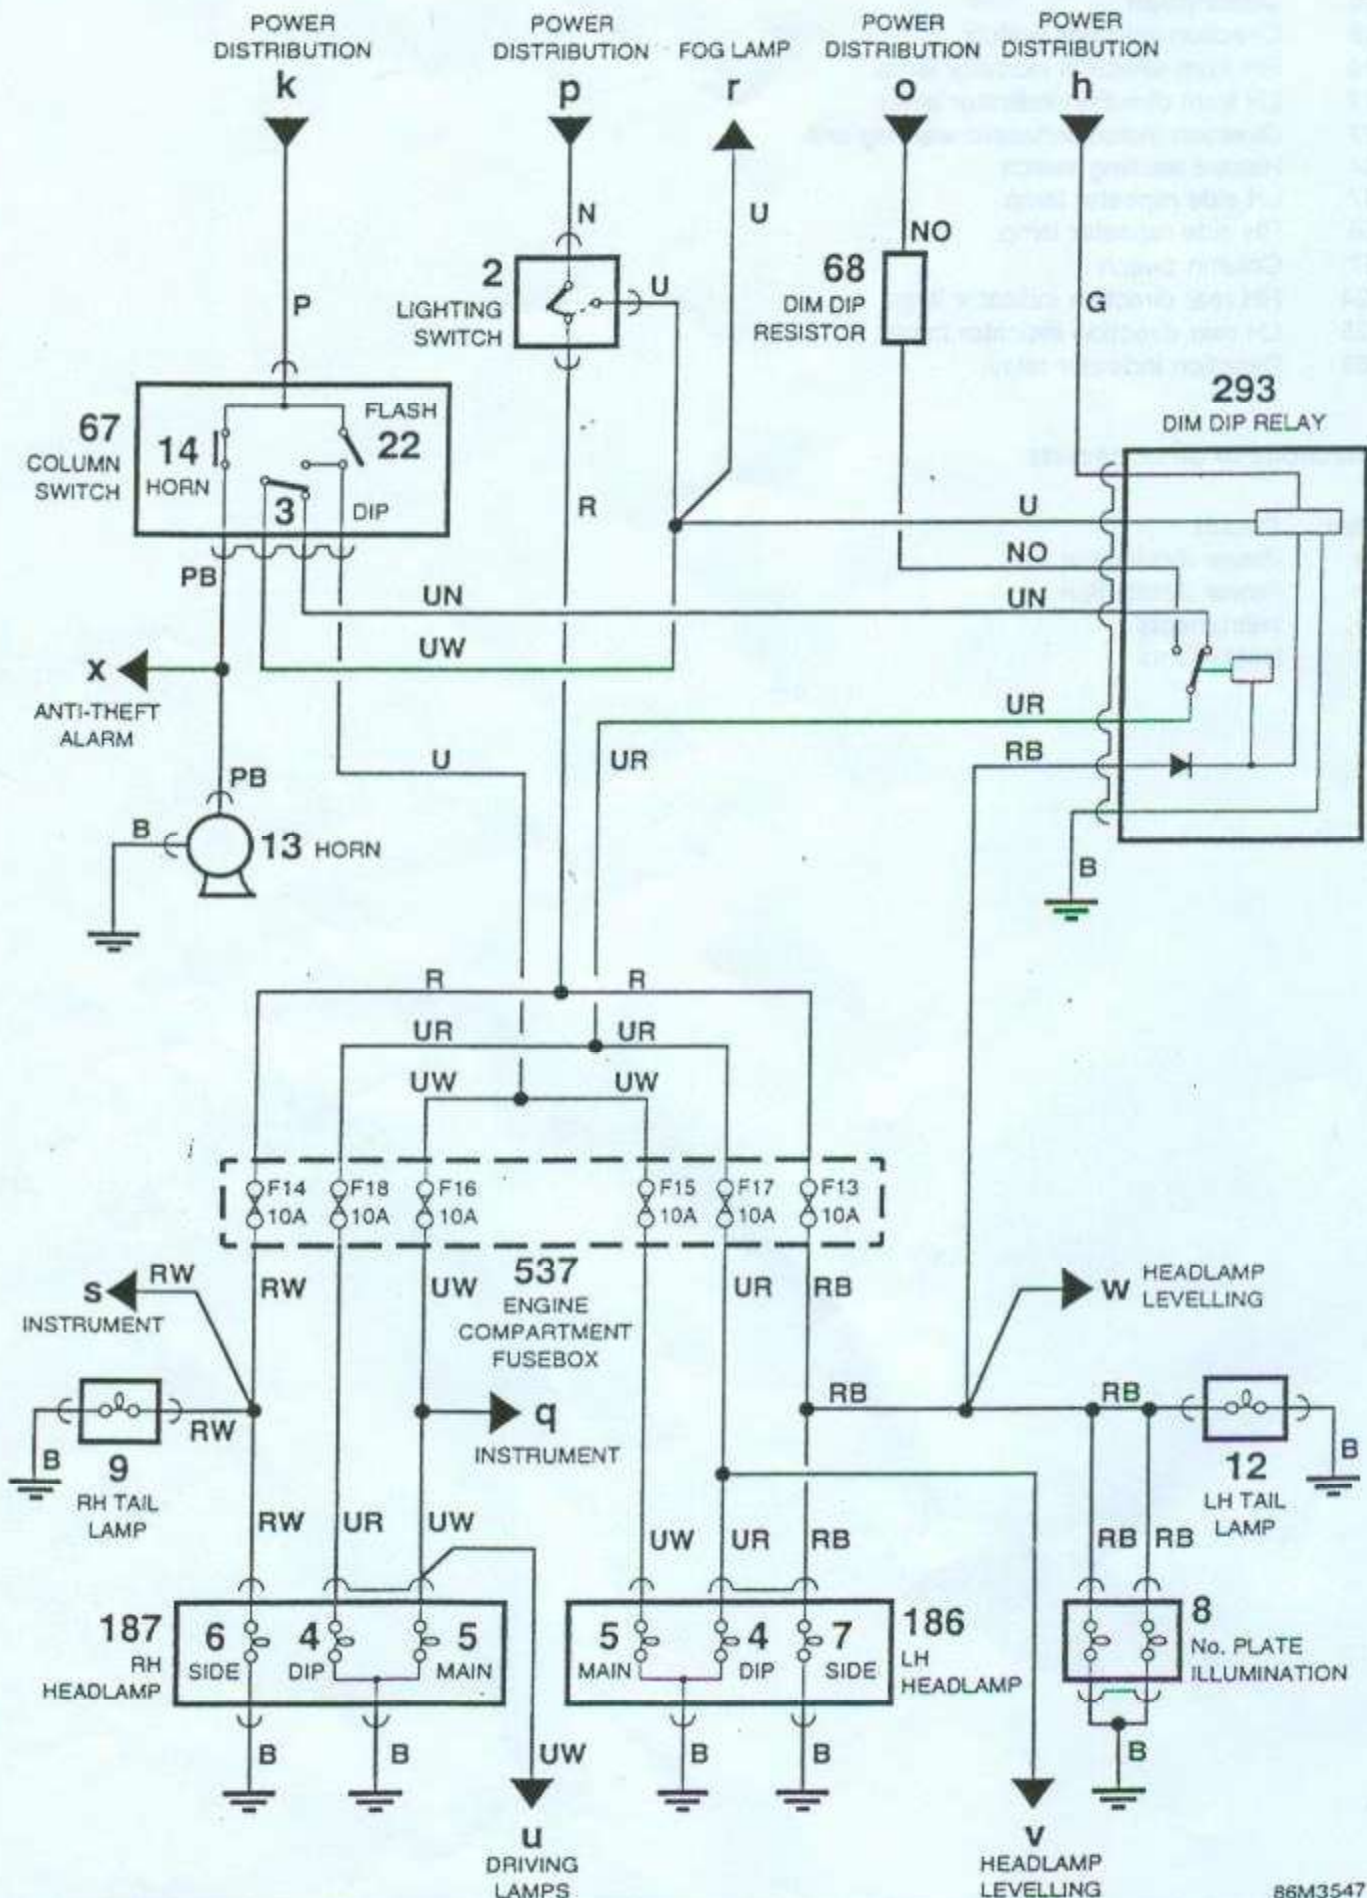

86M3547



EXTERIOR LAMPS AND HORN

No.	Description
2	Lighting switch
3	Dip switch
4	Headlamp dipped beam
5	Headlamp main beam
6	RH side lamp
7	LH side lamp
8	Number plate illumination lamps
9	RH tail lamp
12	LH tail lamp
13	Horn
14	Horn switch
22	Headlamp flash switch
67	Column switch
68	Dim/Dip resistor
186	LH headlamp
187	RH headlamp
293	Dim/Dip relay
537	Engine compartment fusebox
802	Lighting link

Connections to other circuits

Letter	Circuit
h	Power distribution
k	Power distribution
o	Power distribution
p	Power distribution
r	Rear fog lamps
q	Instruments
s	Instruments
u	Auxiliary driving lamps
v	Headlamp levelling
w	Headlamp levelling