



## KEY TO WIRING DIAGRAM

<i>No.</i>	<i>Description</i>	<i>No.</i>	<i>Description</i>
1.	L.H. flasher lamp.	22.	Wiper motor.
2.	L.H. headlamp and pilot lamp.	23.	Heater motor.
3.	R.H. headlamp and pilot lamp.	24.	Heater switch.
4.	R.H. flasher lamp.	25.	Wiper switch.
5.	Distributor.	26.	Ignition switch.
6.	Ignition coil.	27.	Lighting switch.
7.	Horn.	28.	Starter motor.
8.	Dynamo.	29.	Tank unit.
9.	Voltage regulator and cut-out.	30.	Horn-push.
10.	Oil pressure switch.	31.	Starter switch.
11.	Main-beam warning light.	32.	Fuel pump.
12.	Panel illumination light.	33.	Companion box switch and lamp.
13.	Stop light switch.	34.	Direction indicator switch and warning light.
14.	Parcel shelf illumination lamp.	35.	Dipper switch.
15.	Oil pressure warning light.	36.	12-volt battery.
16.	Ignition warning light.	37.	L.H. stop, tail, and flasher lamp.
17.	Flasher unit.	38.	Number-plate illumination lamp.
18.	Panel illumination switch.	39.	R.H. stop, tail, and flasher lamp.
19.	Fuel gauge.	40.	Connect to No. 6 terminal for U.S.A.
20.	Parcel shelf illumination switch.	41.	Earth connection.
21.	35-amp. fuse.		

### CABLE COLOUR CODE

B. Black.	P. Purple.	L. Light.
U. Blue.	R. Red.	D. Dark.
N. Brown.	W. White.	M. Medium.
G. Green.	Y. Yellow.	

When a cable has two colour code letters the first denotes the main colour and the second denotes the tracer colour.