

KEY TO WIRING DIAGRAM

<i>No.</i>	<i>Description</i>	<i>No.</i>	<i>Description</i>
1.	Dynamo.	29.	L.H. front flasher lamp.
2.	Control box.	30.	R.H. rear flasher lamp.
3.	12-volt battery.	31.	L.H. rear flasher lamp.
4.	Starter solenoid.	32.	Heater switch
5.	Starter motor.	33.	Heater motor
6.	Lighting switch.		} when fitted.
7.	Headlamp dip switch.	34.	Fuel gauge.
8.	R.H. headlamp.	35.	Fuel gauge tank unit.
9.	L.H. headlamp.	36.	Windscreen wiper switch.
10.	Main-beam warning lamp.	37.	Windscreen wiper motor.
11.	R.H. sidelamp (in headlamp or flasher) lamp.	38.	Ignition/starter switch.
12.	L.H. sidelamp (in headlamp or flasher) lamp.	39.	Ignition coil.
13.	Panel lamps switch.	40.	Distributor.
14.	Panel lamps.	41.	Fuel pump.
15.	Number-plate lamp (two for Van).	42.	Oil pressure switch.
16.	R.H. stop and tail lamp.	43.	Oil pressure warning lamp.
17.	L.H. stop and tail lamp.	44.	Ignition warning lamp.
18.	Stop lamp switch.	45.	Speedometer.
19.	Fuse unit: 1-2, 35 amp.; 3-4, 35 amp.	64.	Bi-metal instrument voltage stabilizer.
20.	Interior light.	83.	Induction heater and thermostat (when fitted).
21.	R.H. door switch.	84.	Suction chamber heater (when fitted).
22.	L.H. door switch.	94.	Oil filter switch.
23.	Horn.	105.	Oil filter warning lamp.
24.	Horn-push.	115.	Rear window demister switch (when fitted).
25.	Flasher unit.	116.	Rear window demister unit (when fitted).
26.	Direction indicator switch.	131.	Combined reverse switch/automatic gearbox switch (when fitted).
27.	Direction indicator warning lamp.	139.	Connect to No. 6 for U.S.A. (alternative connection).
28.	R.H. front flasher lamp.	150.	Rear window demister warning light (when fitted).

CABLE COLOUR CODE

B. Black.	G. Green.	W. White.
U. Blue.	P. Purple.	Y. Yellow.
N. Brown.	R. Red.	L.G. Light Green.

When a cable has two colour code letters the first denotes the main colour and the second denotes the tracer colour.