



## KEY TO WIRING DIAGRAM

<i>No.</i>	<i>Description</i>	<i>No.</i>	<i>Description</i>
1.	Dynamo.	27.	Direction indicator warning lamp.
2.	Control box.	28.	R.H. front flasher lamp.
3.	12-volt battery.	29.	L.H. front flasher lamp.
4.	Starter solenoid.	30.	R.H. rear flasher lamp.
5.	Starter motor.	31.	L.H. rear flasher lamp.
6.	Lighting switch.	34.	Fuel gauge.
7.	Headlamp dip switch.	35.	Fuel gauge tank unit.
8.	R.H. headlamp.	36.	Windscreen wiper switch.
9.	L.H. headlamp.	37.	Windscreen wiper motor.
10.	Main-beam warning lamp.	38.	Ignition starter switch.
11.	R.H. sidelamp.	39.	Ignition coil.
12.	L.H. sidelamp.	40.	Distributor.
14.	Panel lamps.	41.	Fuel pump.
15.	Number-plate illumination lamp.	42.	Oil pressure switch.
16.	R.H. stop and tail lamp.	43.	Oil pressure warning lamp.
17.	L.H. stop and tail lamp.	44.	Ignition warning lamp.
18.	Stop lamp switch.	45.	Speedometer.
19.	Two-way fuse unit; 1-2, 35 amp.; 3-4, 35 amp.	64.	Bi-metal instrument voltage stabilizer.
23.	Horn.	83.	Induction heater and thermostat.
24.	Horn-push.	84.	Suction chamber heater.
25.	Flasher unit.	94.	Oil filter switch.
26.	Direction indicator switch.	105.	Oil filter warning lamp.

### CABLE COLOUR CODE

B. Black.	G. Green.	W. White.
U. Blue.	P. Purple.	Y. Yellow.
N. Brown.	R. Red.	L.G. Light Green.

When a cable has two colour code letters the first denotes the main colour and the second denotes the tracer colour.