


# WIRING DIAGRAM

1961 to 1964

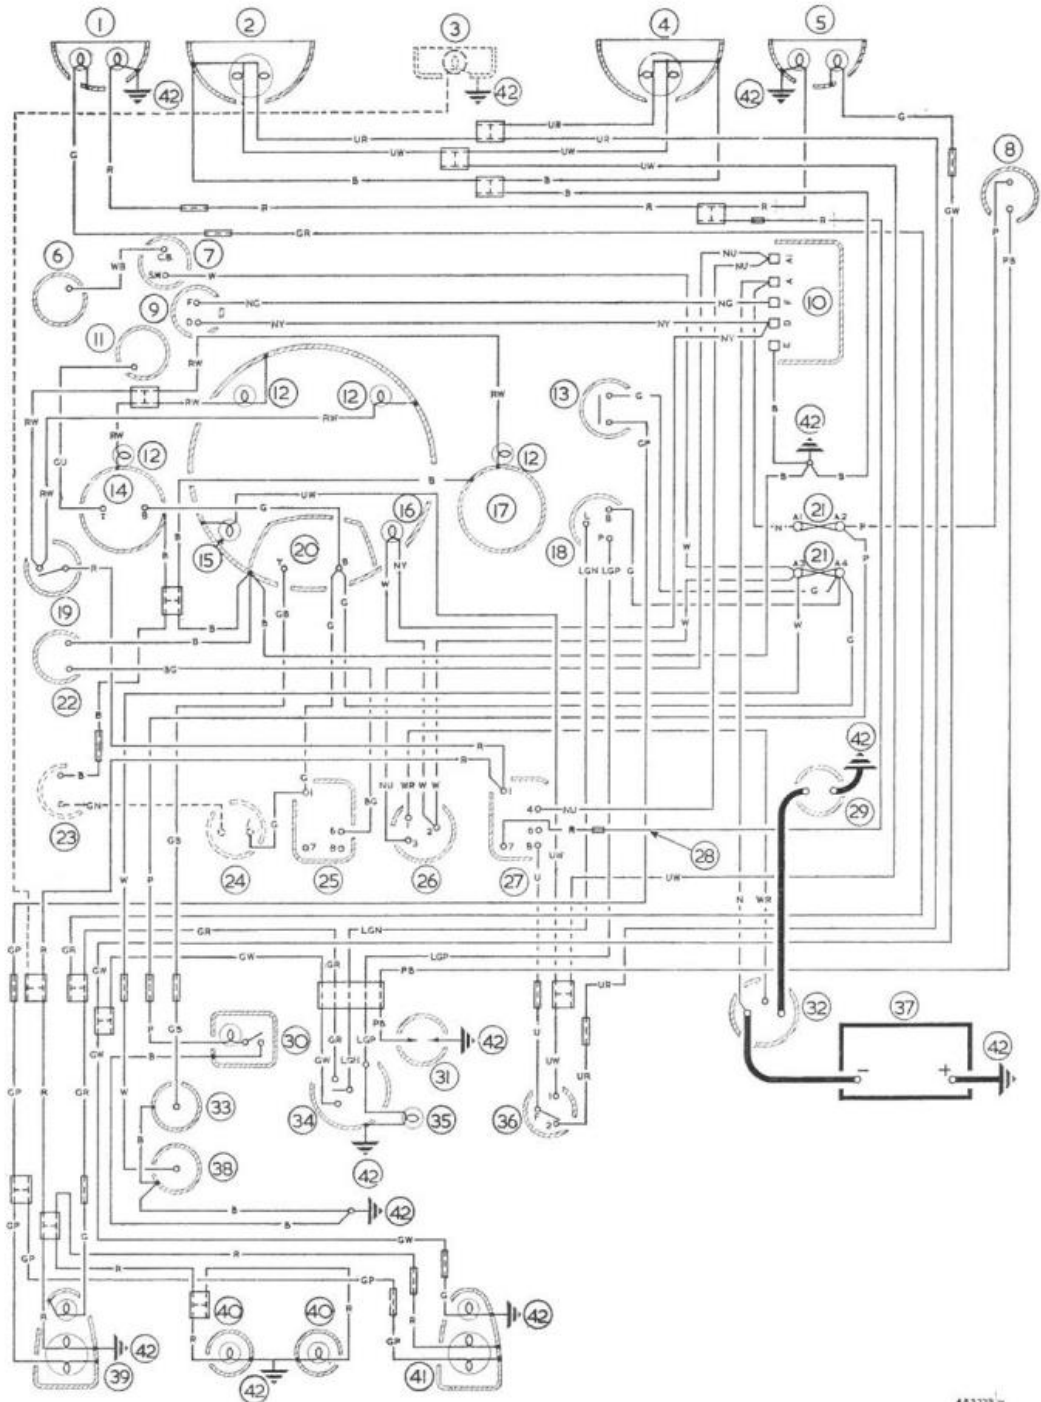

## KEY TO WIRING DIAGRAM

<i>No.</i>	<i>Description</i>	<i>No.</i>	<i>Description</i>
1.	L.H. pilot and flashing indicator lamp.	23.	Heater motor.
2.	L.H. headlamp.	24.	Heater motor switch.
3.	Bonnet badge lamp (Hornet only).	25.	Windscreen wiper switch.
4.	R.H. headlamp.	26.	Ignition/starter switch.
5.	R.H. pilot and flashing indicator lamp.	27.	Headlamp and pilot lamp switch.
6.	Distributor.	28.	Connect to terminal No. 8 for U.S.A.
7.	Ignition coil.	29.	Starter motor.
8.	Horn.	30.	Interior lamp.
9.	Dynamo.	31.	Horn push.
10.	Voltage regulator and cut-out.	32.	Starter solenoid switch.
11.	Thermal element.	33.	Fuel gauge tank unit.
12.	Panel illumination lights.	34.	Flashing indicator switch.
13.	Stop lamp switch.	35.	Flashing indicator warning light.
14.	Temperature gauge.	36.	Headlamp dip-switch.
15.	Main beam warning light.	37.	Battery—12-volt.
16.	Ignition warning light.	38.	Fuel pump.
17.	Oil pressure gauge.	39.	L.H. stop, tail, and flashing indicator lamp.
18.	Flasher unit.	40.	Number-plate illumination lamp.
19.	Panel lights switch.	41.	R.H. stop, tail, and flashing indicator lamp.
20.	Fuel gauge.	42.	Earth connection.
21.	Fuse—35-amp.		
22.	Windscreen wiper motor.		

### CABLE COLOUR CODE

B. Black.	P. Purple.	Y. Yellow.
U. Blue.	R. Red.	L. Light.
N. Brown.	S. Slate.	D. Dark.
G. Green.	W. White.	M. Medium.

When a cable has two colour code letters the first denotes the main colour and the second denotes the tracer colour.