


WIRING DIAGRAM

1964 to 1967

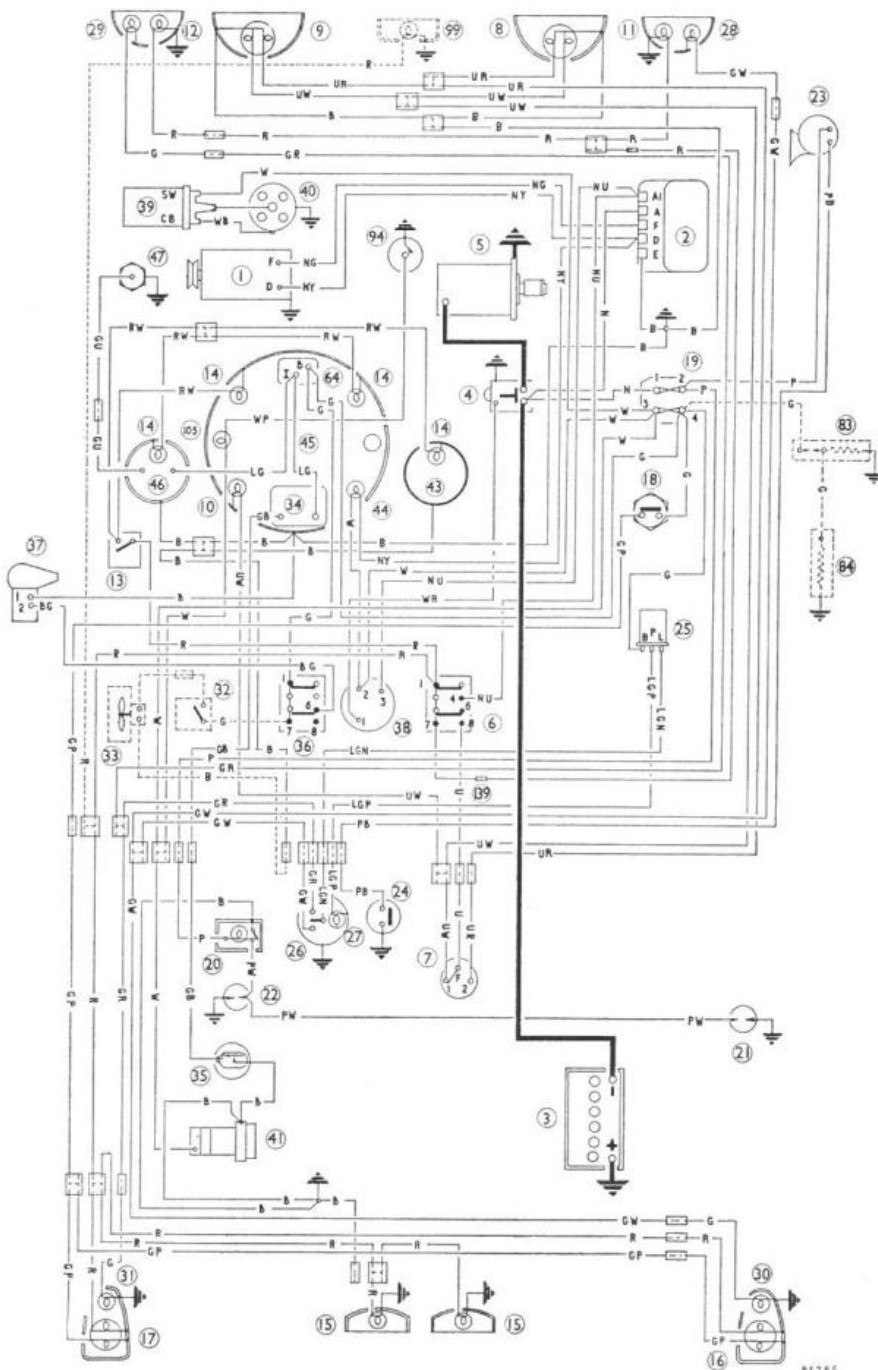

KEY TO WIRING DIAGRAM

<i>No.</i>	<i>Description</i>	<i>No.</i>	<i>Description</i>
1.	Dynamo.	28.	R.H. front flasher lamp.
2.	Control box.	29.	L.H. front flasher lamp.
3.	Battery—12-volt.	30.	R.H. rear flasher lamp.
4.	Starter solenoid.	31.	L.H. rear flasher lamp.
5.	Starter motor.	32.	Heater switch (when fitted).
6.	Lighting switch.	33.	Heater motor (when fitted).
7.	Headlamp dip-switch.	34.	Fuel gauge.
8.	R.H. headlamp.	35.	Fuel gauge tank unit.
9.	L.H. headlamp.	36.	Windscreen wiper switch.
10.	Main beam warning lamp.	37.	Windscreen wiper motor.
11.	R.H. sidelamp.	38.	Ignition/starter switch.
12.	L.H. sidelamp.	39.	Ignition coil.
13.	Panel lamps switch.	40.	Distributor.
14.	Panel lamps.	41.	Fuel pump.
15.	Number-plate illumination lamps.	43.	Oil pressure gauge.
16.	R.H. stop and tail lamp.	44.	Ignition warning lamp.
17.	L.H. stop and tail lamp.	45.	Speedometer.
18.	Stop lamp switch.	46.	Water temperature gauge.
19.	Fuse unit—35 amps. 1-2, 35 amps. 3-4.	47.	Water temperature transmitter.
20.	Interior light.	64.	Bi-metal instrument voltage stabilizer.
21.	R.H. door switch.	83.	Induction heater and thermostat. } When fitted.
22.	L.H. door switch.	84.	
23.	Horn.	94.	Oil filter switch.
24.	Horn push.	99.	Radiator badge illumination lamp.
25.	Flasher unit.	105.	Oil filter warning lamp.
26.	Direction indicator switch.	139.	Connect to No. 6 for U.S.A. (Alternative connection).
27.	Direction indicator warning lamp.		

CABLE COLOUR CODE

N. Brown.	P. Purple.	W. White.
U. Blue.	G. Green.	Y. Yellow.
R. Red.	L.G. Light green.	B. Black.

When a cable has two colour code letters the first denotes the main colour and the second denotes the tracer colour.